60233086GB.fm Page 1 Friday, March 18, 2005 4:29 PM

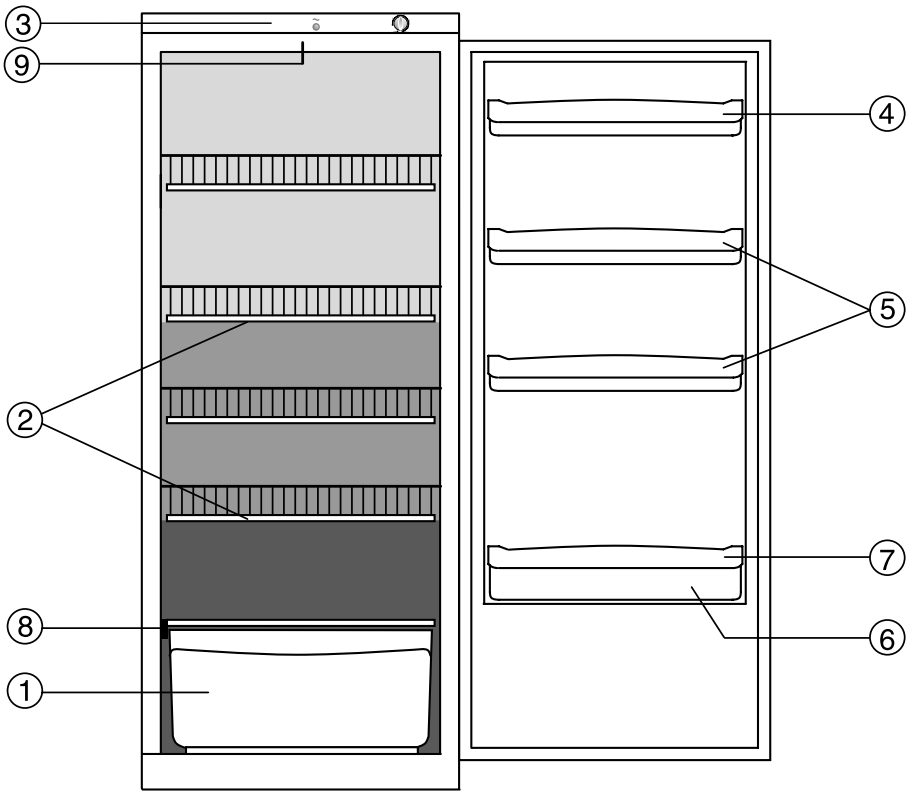

A. Refrigerator Compartment

1. Crisper drawer
2. Shelves / Shelf area
3. Control panel
4. Upper door tray
5. Door trays
6. Bottle rack
7. Removable bottle restrainer (if present)
8. Rating plate (at the side of crisper drawer)
9. Light, positioned either below the control panel or inside the appliance (depending on model)

Least cold zone

Intermediate temperature zone

Coldest zone

Notes: The number of shelves and type of accessories may vary, depending on the model.
All shelves, door trays and racks are removable.
Important: Refrigerator accessories must not be washed in a dishwasher.

Refrigerator compartment controls (depending on the model)

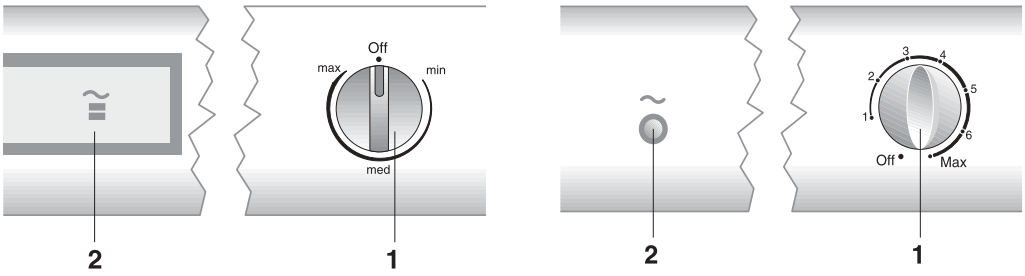

1. Thermostat knob
2. Green indicator (operation of appliance)

Thermostat on	**●/Off**:	no refrigeration, no light
Thermostat on	**1-min**:	minimum **refrigeration**.
Thermostat on	**7-Max**:	refrigeration **maximum** cooling.

Recommended thermostat setting: 3-4/med position.

The refrigerator can operate at ambient temperatures between +10°C and +38°C. Optimal performance is obtained at temperatures between +16°C and +38°C.

Note: The ambient air temperature, the frequency of door opening and the position of the appliance can affect the internal temperatures of the refrigerator. These factors must be taken into account when setting the thermostat.

Removing the light bulb

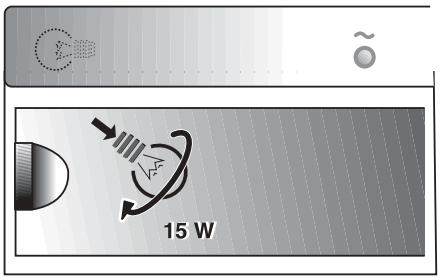

1. Unscrew the light bulb as shown in the figure.

Replacing the bulb

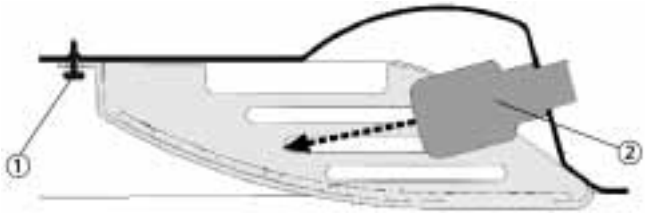

1. Loosen the screw and remove the lamp cover.
2. When replacing the bulb, bear in mind that this appliance is fitted with a special bulb (15W with bayonet fitting); to replace do not unscrew, but pull towards the inside of the appliance (as indicated by the arrow).
3. Refit the lamp cover and secure it with the screw.

Printed in Italy 03/05